Compass Chair dimensions

User dimensions (cm)	R310 size 1	R320 size 2	R330 size 3	R340 size 4	R350 size 5
Height	91 – 114	109 – 127	122 – 145	140 – 165	165+
Knee to heel	With short legs: 23 – 28	27 – 37	32 – 42	37 – 47	42 – 52
	With standard legs: 25.5 – 33				
Min – max thigh circumference for pelvic harness	27 – 60	30 – 72	37 – 77	38 – 88	44 – 98

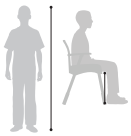

Key user dimension: height / knee to heel
The user's overall height and measurement from knee to heel is a general guide to help you select the appropriate chair. Choose the model that allows for growth.

Important: Make sure that seat width, depth and height are adequate for each user, and that the user's weight does not exceed the maximum working load.

Item dimensions (cm)	R310	R320	R330	R340	R350
Seat height – in 2.5 cm increments*	23 – 33	27 – 37	32 – 42	37 – 47	42 – 52
Seat depth	24	28	32.5	37.5	42
Seat width	27	31	36	41.5	46.5
Backrest height	24	28	32	36.5	41
Armrest height above the seat	14	15	18	21	22.5
Armrest length	17	19	22	24.5	28
Max. working load (kg)	45	55	80	100	113

* If using rocking chair base, add 2 inches to seat height.

2026 order form

Use dimension chart to select appropriate size.

		R310 size 1	R320 size 2	R330 size 3	R340 size 4	R350 size 5
***Compass chair**		R311 ☐	R321 ☐	R331 ☐	R341 ☐	R351 ☐
***Leg type** CHOOSE	Short	R314 ☐	N/A	N/A	N/A	N/A
	Short (low friction)	R334 ☐	N/A	N/A	N/A	N/A
	Standard	R315* ☐	R315 ☐	R315 ☐	R315 ☐	R315 ☐
	Standard (low friction)	R335* ☐	R335 ☐	R335 ☐	R335 ☐	R335 ☐
Front stability feet (pair)		R326 ☐	R326 ☐	R326 ☐	R326 ☐	R326 ☐
Rear stability feet (pair)		R327 ☐	R327 ☐	R327 ☐	R327 ☐	R327 ☐
Dynamic feet (set of four)		R328 ☐	R328 ☐	R328 ☐	R328 ☐	R328 ☐
New! Rocking chair base		R381 ☐	R382 ☐	R383 ☐	R384 ☐	R385 ☐
Seat belt		R312 ☐	R312 ☐	R332 ☐	R342 ☐	R342 ☐
Pelvic harness		R313 ☐	R323 ☐	R333 ☐	R343 ☐	R353 ☐

* **Required**

* The standard legs can be used on size 1, but the lower two positions will not be accessible.